



DERWENT

DRAWN TO PERFECTION

PAINT PENS ACTIVATION

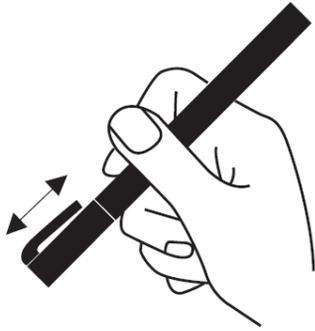


1. Shake the pen well to allow the pigment to mix

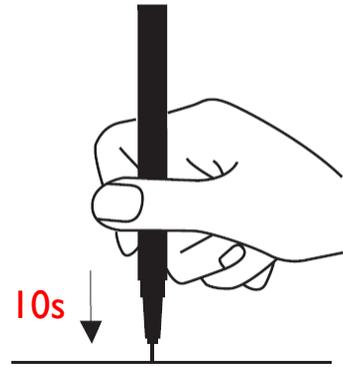

2. Remove lid and depress nib for 10 seconds



3. Keep the pen in an upright position whilst waiting for ink to flow

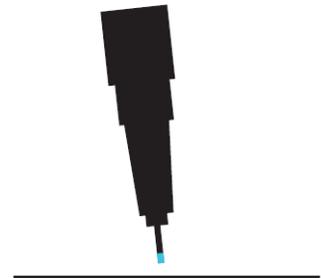

4. Colour will run through to the nib

Repeat the process if ink doesn't flow on the first attempt




Replace cap after use

Store pens horizontally

NEVER OVERPUMP THE NIBS

PAINT PENS PREVENTING FLOODING


- Flooding occurs when too much ink flows into the nib causing it to blob. This is due to excess pumping of the nib
- Steps to stop the pen from flooding:

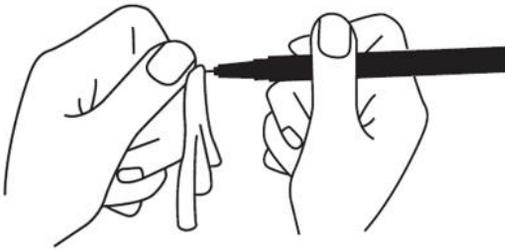


1. Wipe the nib with a cloth



2. Turn the pen upright with the nib pointing upwards

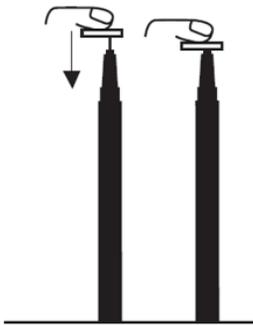

3. Press down on the nib to allow ink to flow back into the pen

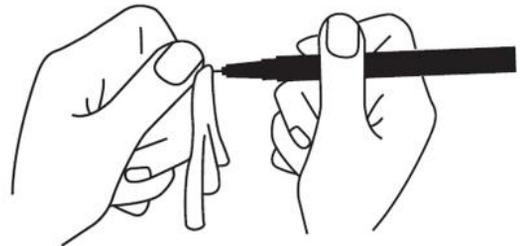

4. Wipe the nib and retry



Replace cap after use

Store pens horizontally

NEVER OVERPUMP THE NIBS

DERWENT


DRAWN TO PERFECTION

PAINT PENS UNBLOCKING


- Blocking occurs when ink dries on the nib when the cap has been left off for too long
- Steps to unblock the nib:



1. Shake the pen well with the cap on

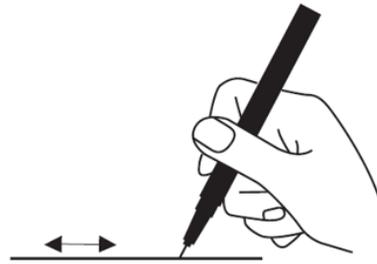

2. Try using the pen again drawing lots of lines

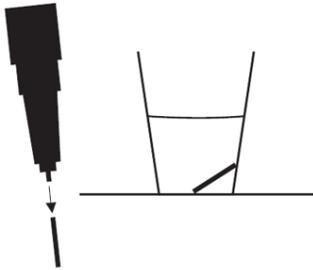

3. Remove the nib by pulling and place in warm water. Allow to dry and retry



4. Pierce the end of the nib with a pin and retry



Replace cap after use

Store pens horizontally

NEVER OVERPUMP THE NIBS